



How to Create Work Orders from Alarms in PredictMate™

To avoid creating too many work orders follow this procedure.

- 1) From "Equipment", "Reports" select "Tag Equipment with Alarms".

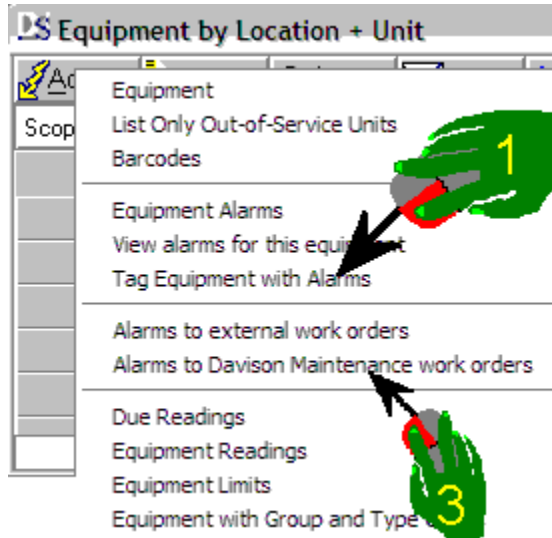

- 2) Remove the tags for equipment that do NOT require a work order.

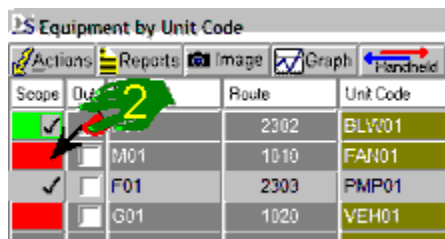

- 3) Select "Reports", then "Alarms to Davison Maintenance work orders". Only the tagged records will create a work order in Davison Maintenance or external work orders.

You can also export alarms to external work orders. A text file is created of external work orders for each equipment unit with alarms. Custom formats are available. The standard format is a comma-separated (.CSV) file.

Run commands can be scheduled to add work orders from alarms without review. See [External Work Orders](#). Another run command can print work orders from Davison CMMS when scheduled. See [Reports for Work Orders](#).

Condition-Directed (CD) tasks, configured in the Preventive Maintenance module, can print for alarms. See [Condition-Directed Tasks Setup](#)